


K.I.S.S. COUPLER KIT

• APPLICATION: POLARIS RMK KHAOS (2020) / POLARIS RMK AXYS (2016-2020) / POLARIS PRO RMK (2011-2015)

PART NUMBER: K29-0603-1

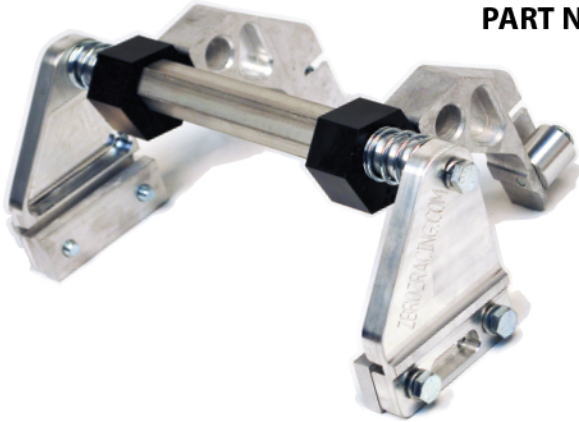

KIT INCLUDES:

- (1) K.I.S.S. COUPLER ASSEMBLY
- (2) IMPACT BLOCK

HARDWARE:


- (2) PAN HEAD BOLT
- (2) SPACER

TOOLS REQUIRED:


- 1/2" END WRENCH OR SOCKET
- PHILLIPS SCREWDRIVER
- DRILL
- 5/8" DRILL BIT




1. INSTALL IMPACT BLOCKS TO EACH SIDE OF THE SCISSOR ARM USING THE SUPPLIED SPACERS AND PAN HEAD BOLTS.

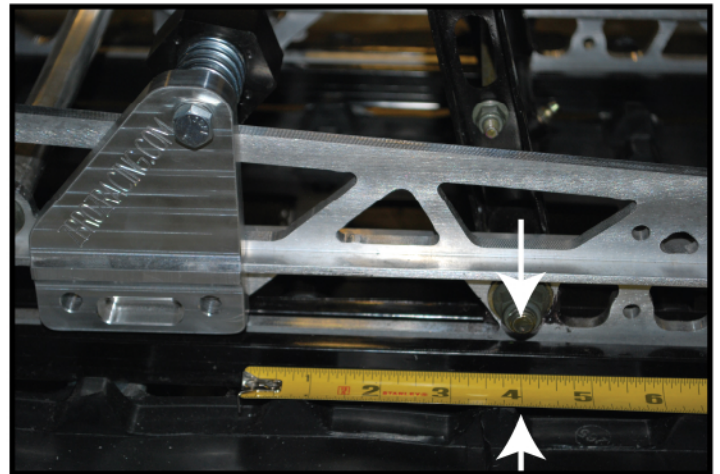

2. POSITION K.I.S.S. COUPLER ASSEMBLY 4" BACK FROM BOTTOM SCISSOR ARM BOLT MOUNT LOCATION.

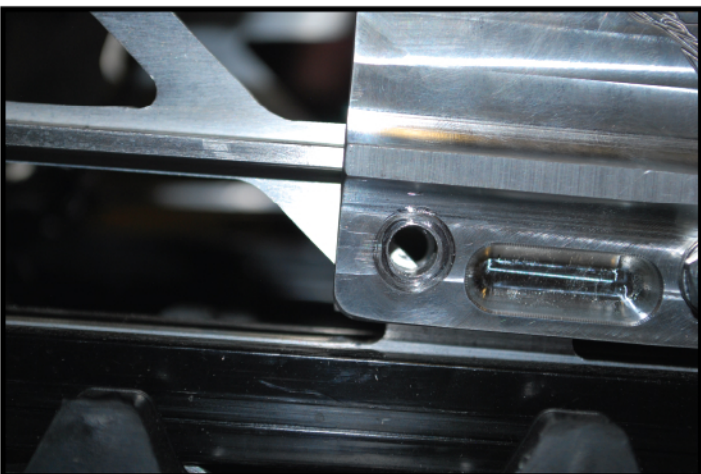

3. MARK REAR K.I.S.S. COUPLER ASSEMBLY MOUNT LOCATION ON SKID RAIL.

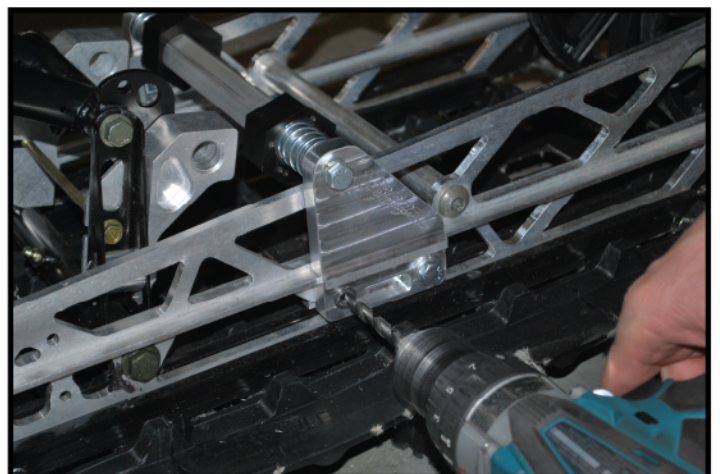

4. USE 5/8" DRILL BIT TO MAKE SPACE FOR BOLT TO CLEAR ON SKID RAIL.

TIGHTEN BOLTS TO K.I.S.S. COUPLER ASSEMBLY AND SET BOTH BLOCKS TO FIRST SETTING THAT WILL NOT ADD ANY COUPLING EFFECT TO THE REAR SUSPENSION. THE ZBROZ K.I.S.S. COUPLING SYSTEM HAS 4 TOTAL SETTINGS. TO ADJUST THE COUPLER, YOU SIMPLY NEED TO PULL OUT THE BLACK PLASTIC BLOCK (ON EACH SIDE) AND ROTATE THE BLOCK TO THE DESIRED SETTING. THE BLACK PLASTIC BLOCK WILL THEN RELEASE BACK INTO ITS GROOVES AND REMAIN IN THAT POSITION.