





K99-0621950-01 Polaris Matryx Foot Stirrup

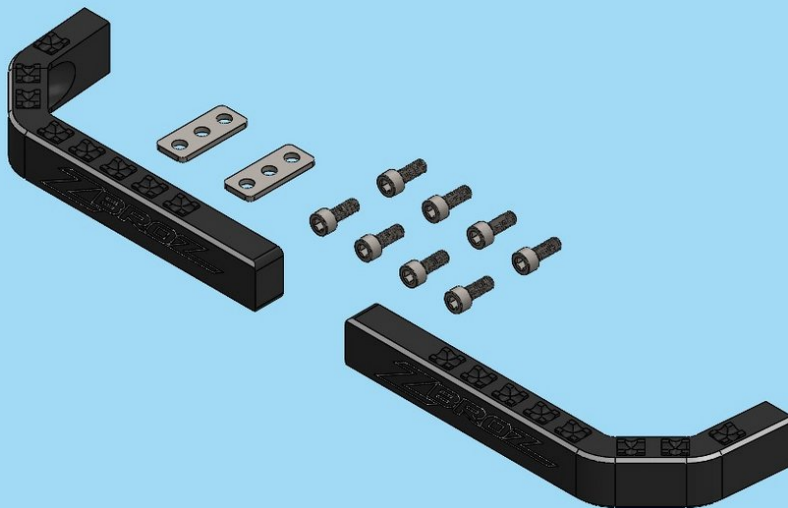

 **TOOLS:**


- 8mm Socket (1)
 - 5 mm Allen/Hex Wrench (1)
 - 6" Socket Extension 3/8" Drive (1)
 - 3/8 Drive Ratchet (1)
-

Step 1 — Removing factory stirrups

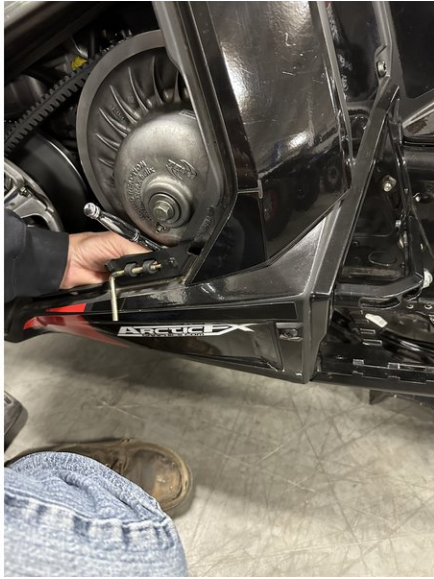

- Begin by removing side panel to access factory bolts holding foot stirrup in place.
- Remove 2 factory bolts with 8mm socket. **IMAGE 1**
- Next remove 2 bolts near tunnel holding stirrup. **IMAGE 2**
- Repeat on opposite side.

Step 2 — New stirrup install

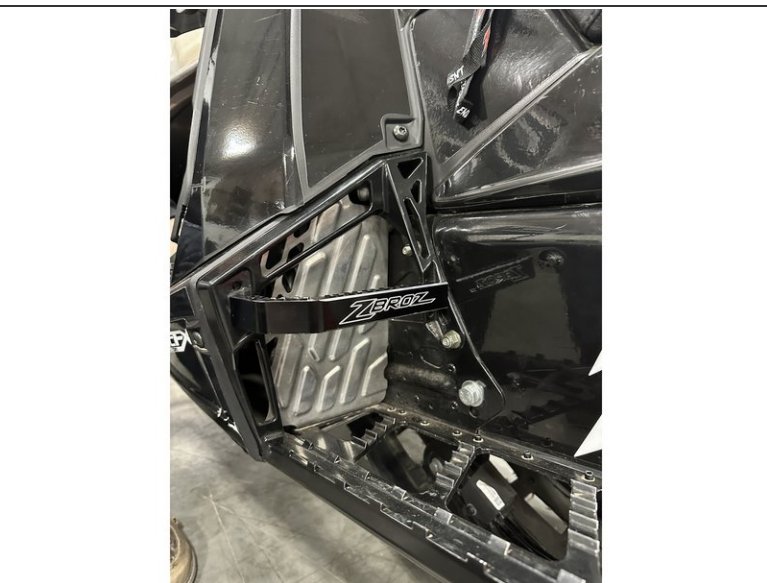

- Locate 2 hex bolts and washer plate. Washer plate will be added on the inside of panel to give rigidity to stirrup mounting. Use 5mm Allen to tighten bolts into new Zbroz foot stirrup. **IMAGE 1**
 - Mounting location is up to you on how you want the height of the stirrup.
- Install and tighten hex bolts near tunnel side.
- Repeat on opposite side.