



Honda Talon 1000X Spring Kit

If your Zbroz Racing product has a damaged or is missing parts, please contact customer service directly and a new replacement part will be sent to you immediately. Warranty inquiries, please supply photos and description that resulted in failure to customerservice@zbrozracing.com

(435) 753-7774

Mon-Fri 8am-5pm (MST)

customerservice@zbrozracing.com

www.zbrozracing.com

****Please keep these instructions for future reference.****

Limited Lifetime Warranty

Zbroz Racing will warranty to the original purchaser any failed Zbroz Racing suspension product in the event of failure due to construction or material failure of the product. You will be required to contact Zbroz Racing customer service with description and photos that resulted in failure.

Zbroz Racing builds suspension products to meet and exceed your expectations in quality, performance and durability. All Zbroz Racing suspension products are rigorously tested during development and prototype parts are pushed to the limit by professional industry athletes, backcountry athletes and race teams.

Zbroz Racing Limited Lifetime Warranty excludes the following wear parts as these parts are considered defective when worn: Ball Joints, Bushings, Bump Stops, Tie Rod Ends, Heim Joints, Shock Absorbers

This product warranty is voided if the vehicle is not aligned after kit installation and proper maintenance is routinely done.

Product purchased directly from Zbroz Racing has a 90 day return policy on uninstalled products from the date of purchase (may be subject to restocking fee). Uninstalled product returns must be in the original Zbroz Racing packaging. Please call (435) 753-7774 to get an RGA# for any return. Customer is responsible for shipping costs back to Zbroz Racing. Returns without RGA# will be refused. Contact Zbroz Racing directly about any potentially defective parts prior to removal from vehicle.

Zbroz Racing is NOT responsible for any subsequent damages to any related vehicle parts due to misuse, abuse, improper installation, or lack of maintenance. Furthermore, Zbroz Racing reserves the right to change, modify or cancel this warranty without prior notice.



Read instructions thoroughly and completely before beginning installation.

Zbroz Racing is not responsible for damage or failure resulting from improper installation.

Safety Warning

Misuse of this product could lead to injury or death.

Suspension systems or components that enhance the on and off-road performance of your vehicle may cause it to handle differently than it did from the factory. Extreme care must be used to prevent loss of control or vehicle rollover during abrupt maneuvers.

Always operate your vehicle at reduced speeds to ensure your ability to control your vehicle under all driving conditions. Failure to drive safely may result in serious injury or death to driver and passengers.

Driver and passengers must ALWAYS wear your seat belts, avoid quick sharp turns and other sudden maneuvers.

Zbroz Racing does not recommend the combined use of suspension lifts, body lifts, or other lifting devices.

You should never operate your vehicle under the influence of alcohol or drugs.

Constant maintenance is required to keep your vehicle safe. Thoroughly inspect your vehicle before and after every off-road use.

It is the responsibility of the retailer and/or the installer to review all state and local laws, with the end user of this product, related to bumper height laws and the lifting of their vehicle before the purchase and installation of any Zbroz Racing products.

It is the responsibility of the driver/s to check their surrounding area for obstructions, people, and animals before moving the vehicle.

All raised vehicles have increased blind spots; damage, injury and/or death can occur if these instructions are not followed.

Installation Warning

All steps and procedures described in these instructions were performed while the vehicle was properly supported on a two post vehicle lift with safety jacks. Use caution during all disassembly and assembly steps to insure suspension components are not over extended causing damage to any vehicle components and parts included in this kit. Included instructions are guidelines only for recommended procedures and are not meant to be definitive.

Installer is responsible to insure a safe and controllable vehicle after performing modifications. Zbroz Racing Suspension recommends the use of an OE Service Manual for model/year of vehicle when disassembly and assembly of factory and related components. Unless otherwise specified, tighten all bolts and fasteners to standard torque specifications listed within the OE Service Manual.

Suspension components that use rubber or urethane bushings should be tightened with the vehicle at normal ride height. This will prevent premature wear or failure of the bushing and maintain ride comfort.

Larger tire and wheel combinations may increase leverage on suspension, steering, and related components. Due to payload options and initial ride height variances, the amount of lift is a base figure. Final ride height dimensions may vary in accordance to original vehicle ride height. Always measure the vehicle ride height prior to beginning installation.



Installation Instructions

Spring Kit For FOX QS3 Shock

Application: Honda Talon 1000X (2019 -2021) SKU: K25-HA01-0



| BILL OF MATERIALS | QTY |
|---------------------------|-----|
| Front Main Springs | 2 |
| Front Tender Springs | 2 |
| Rear Main Springs | 2 |
| Rear Tender Springs | 2 |
| Tuned By Reservoir Decals | 4 |

| TOOLS REQUIRED |
|------------------------|
| Floor Jack Or Lift |
| 17mm Wrench/Socket Set |
| 3/32" Allen Wrench |
| Flathead Screwdriver |
| Hammer or Mallet |

This spring kit can be installed with shocks on your Talon by using a floor jack or lift. Select a flat install location. If using floor jack, always make sure to block tires - work safely! If removing shocks for installation. Back OEM Preload rings on all shocks before removing. Use a solid mounted vice for installation.

Follow These Steps First:

1. Measure current ride height at front center frame point and rear center frame point.
2. Write down these measurements for before and after installation notes.
3. If removing shocks, label each shock to eliminate installation problems with the piggyback reservoirs positioning/clocking when reinstalling.
4. Clean shocks! Remove all dirt and mud.
5. Lift Talon using a floor jack or lift and remove tires.

Rear Shocks Spring Kit Installation:

Disconnect lower shock bolt from trailing arm. Swing lower shock rearward and out.

Size: 17mm



Loosen the top preload nut by using a flathead screwdriver as shown and knocking it counterclockwise. Loosen enough so that the nut is out of the way.



Rotate OEM spring stack and preload ring counter clockwise to the top of the threaded shock body or until springs are loose & free.



Pull the lower bumpstop up out of the way and push up on the shock guard in order to reveal and remove the spring retainer clip.



Continued Rear Shocks Spring Kit Installation:

With a flathead screwdriver remove the clip by putting the tip into the indexing slot and prying the clip out. Remove OEM spring stack. Reuse OEM spring divider, OEM lower spring retainer. Remove OEM Springs.



Next, you will need to cut the OEM spring retainer down to 2" Long. Using a measuring device mark 2" down from the bottom of the top spring divider ring.



To help you cut a straight line make a few marks around the retainer and then run black electrical tape along your marks. Using a hack saw or other cutting device cut the 2" off the at your cut marks.



Install OEM spring divider with long end pointing up into the new ZBROZ Tender Spring. Place the OEM Reducer on top as shown.



Continued Rear Shocks Spring Kit Install:


Install new tender spring stack, main spring, shock guard and lower spring clip.



Reconnect shock to trailing arm.

Size: 17mm

Torque shock bolt to factory spec.

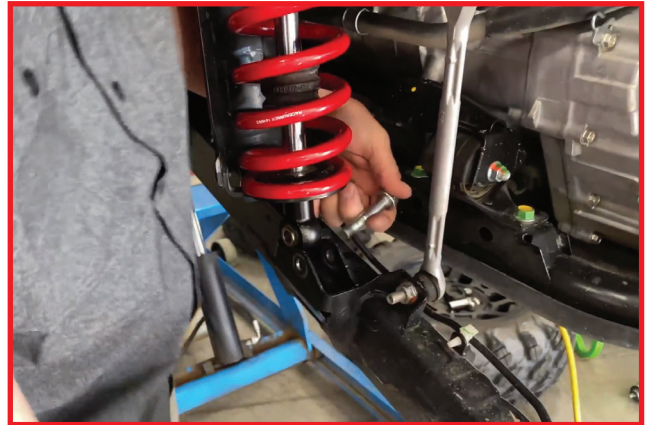

Set "zero Preload" by pressing down on trailing arm and holding to fully extend internal bump stop spring. Rotate preload ring clockwise until spring stack contacts preload ring. This is your "zero preload" point. From here you can set additional preload by tightening the crossover rings. *Additional Preload may be needed depending on after-market accessories 4-6 turns from zero is a good starting point.



Don't forget to install the new "Tuned by Zbroz" reservoir decals.

Repeat steps to install spring kit to other rear shock.




Front Shocks Spring Kit Installation:

Optional: Disconnect And Remove Front Sway Bar. Due to this progressive dual rate spring setup, your front sway bar is no longer necessary for most riding terrain applications.

Disconnect lower shock bolt from upper a-arm.

Size: 17mm

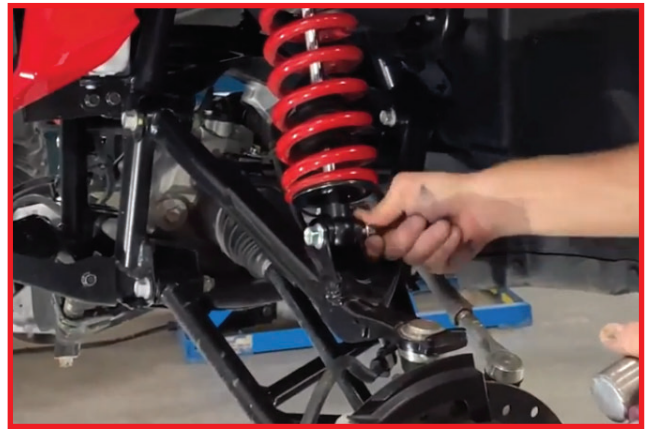

Loosen OEM upper preload ring from OEM lower preload ring. Use flathead screwdriver and hammer.



Rotate OEM preload rings counter clockwise all the way to top of threaded shock body. or until OEM spring stack is now loose.



Pull the lower bumpstop up out of the way and push up on the shock guard in order to reveal and remove the spring retainer clip.



Continued Front Shocks Spring Kit Installation:

With a flathead screwdriver remove the clip by putting the tip into the indexing slot and prying the clip out. Remove OEM spring stack. Reuse OEM spring divider, OEM lower spring retainer. Remove OEM spring stack.



You will NOT need to cut or modify the OEM spring retainer on the front shock kit. Install OEM spring divider with long end pointing up into the new ZBROZ Tender Spring. Place the OEM Reducer on top as shown.



Install new tender spring stack, main spring, lower spring clip.



Reconnect shock to A-arm.

Size: 17mm

Torque shock bolt to factory spec.



Continued Front Shocks Spring Kit Installation:

Set “zero Preload” by pressing down on A-arm and holding to fully extend internal bump stop spring. Rotate preload ring clockwise until spring stack contacts preload ring. This is your “zero preload” point. From here you can set additional preload by tightening the crossover rings. *Additional Preload may be needed depending on after-market accessories 4-6 turns from zero is a good starting point.



Dont forget to Install the new “Tuned by Zbroz” reservoir decals.

Repeat steps to install spring kit to other rear shock.



Final Spring Kit Installation:

Optional: Disconnect And Remove Front Sway Bar

Due to this progressive dual rate spring setup, your front sway bar is no longer necessary for most riding terrain applications.

Install Tires And Torque Lug Bolts As Follows:

Steel Wheels: 30ft-lbs | Aluminum wheels: 27ft-lbs
Torque Wheels to OE specs as shown in your owners manual

Check Ride Height Setup:

Drive RZR around at slow speed, turning left and right to settle spring kit. Coast to stop, do not apply brakes to ensure spring kit is naturally settled. Measure and compare ride height measurements with pre-install measurements. Adjust by adding or removing Preload.

How to Adjust:

With tires on, use a floor jack or lift so that shocks are fully extended and adjust as follows:

If Ride Height is too TALL:

- Rotate OEM Preload ring 2 full counter clockwise rotations, settle spring kit and check.

If Ride Height is too LOW:

- Rotate OEM Preload ring 2 full clockwise rotations, settle spring kit and check.

Final Spring Kit Installation Continued:

Check Rear Cross Over Ring Setup:

With Preload and ride height set, check measurement of rear cross over rings. The distance between the cross over ring and spring divider determines when the main spring is engaged.

How to Adjust:

With tires on, use a floor jack or lift so that shocks are fully extended and adjust as follows:

General Recreation for Mountain Trail, Desert/Dune and Rock Crawling:

- Set cross over ring at 4 ^{1/2}" from spring divider. This will deliver increased control, plush ride feel, roll stability and bottoming resistance.

Low Speed Mountain Trail and Rock Crawling:

- Move cross over ring away from spring divider to engage main spring slower. This will deliver a plush ride feel and maximum articulation at slow speeds. Do not exceed 5 ^{1/2}".

High Speed Desert/Dune and Mountain Trail Driving:

- Move cross over ring closer to spring divider to engage main spring faster. This will deliver more increased bottoming resistance and G-Out control.

Check Ride Height and Cross Over Setup after the first 200 miles of use and adjust as needed.

Results of Installing this Zbroz Racing Spring Kit

Ride Height Gain: average ride height increase is 2"

Aggressive Stance: allows fitment of larger tires

Tune-able Progressive Spring Setup: soaks up small bumps better before initiating main springs

Bottoming resistance: increased bottoming resistance with tune-able cross over rings

Reduced body roll: tuned spring setup delivers increased control when turning and cornering

Race inspired durability: premium quality / high tensile / light weight / springs that won't sag

